

Design Your Awning

1-800-283-8053

www.DesignYourAwning.com

info@designyourawning.com

The Cannon Canopy Install Instructions




Tools needed for Installation

- Tape Measure & Pencil
- Level (48" level recommended)
- Cordless / Electric Drill
- Ladder
- Caulk gun

Cannon Canopy Awning Install Instructions


What's in the awning box?

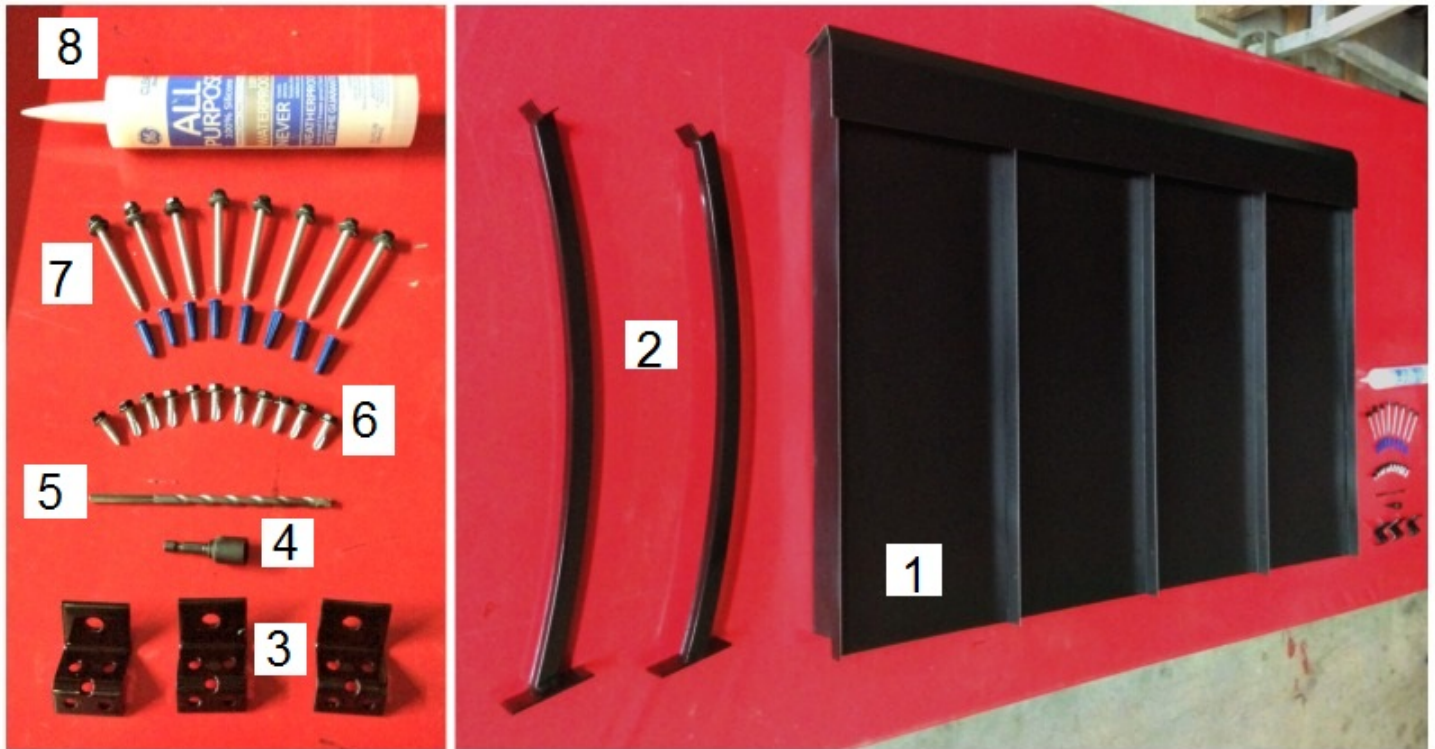

Description

- | | |
|---------------------------------|--|
| 1. Classic Awning (52"x36") (1) | 5. Hammer drill bit for brick or stone (1) |
| 2. Smith Scrolls (left & right) | 6. Self-tapping screws (12) |
| 3. EZ awning clips (3) | 7. 3" Wood screws and Anchors (8) |
| 4. 3/8 driver (1) | 8. Tube of silicon (1) |


Step 1

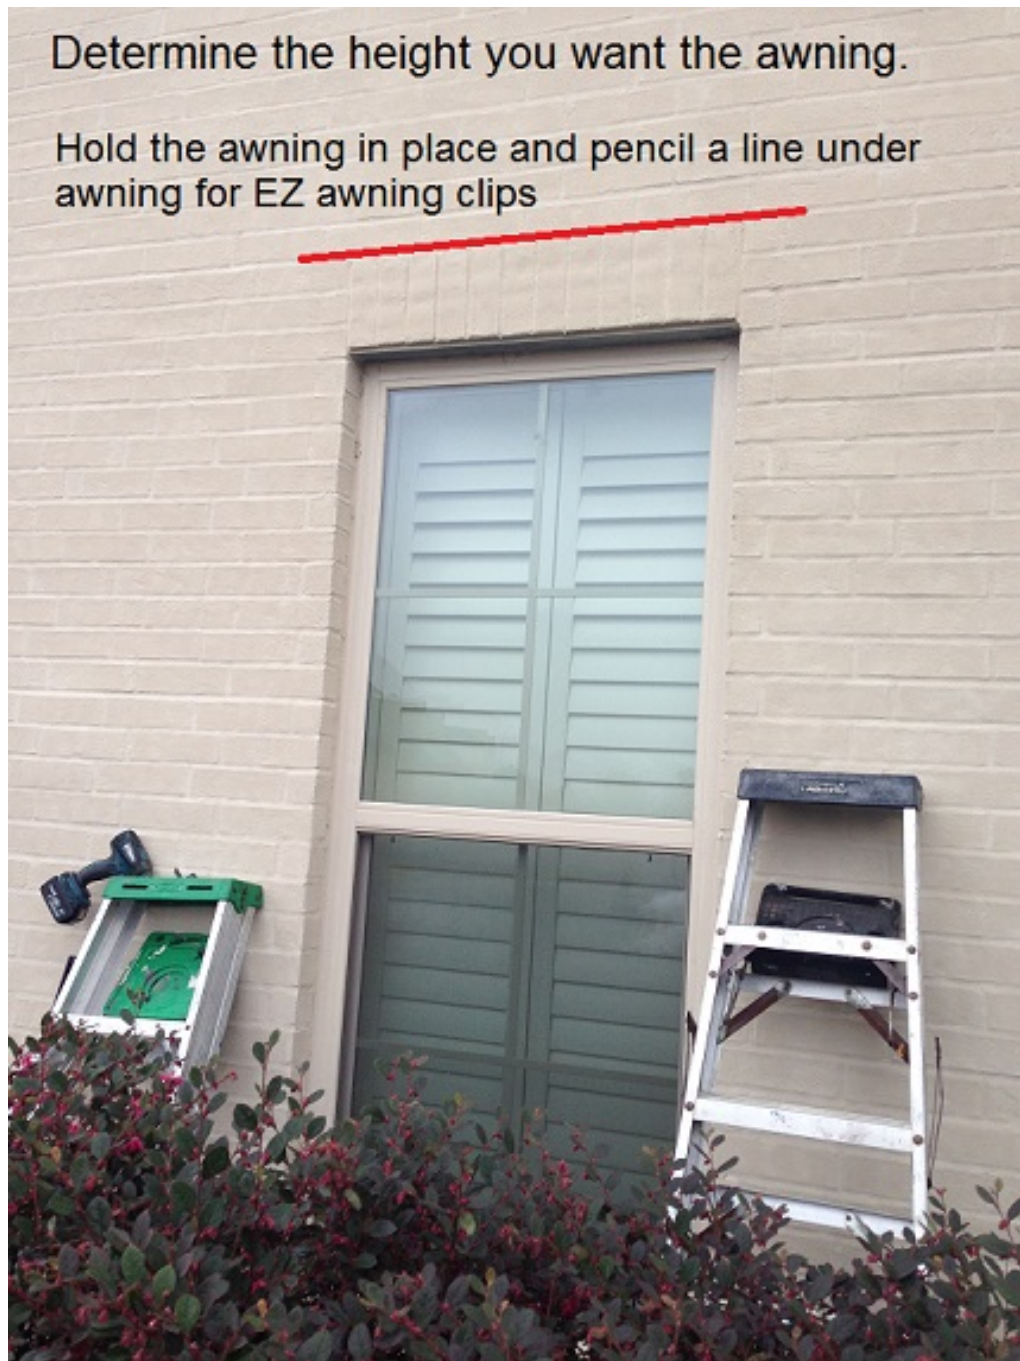

STEP 2



Stucco

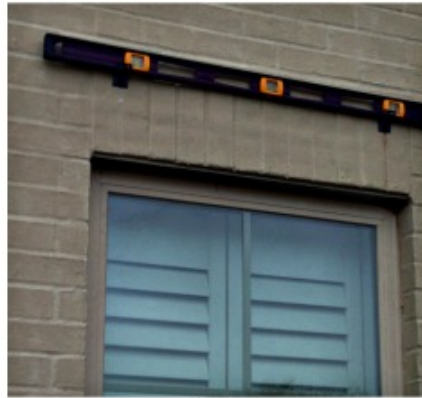


Brick



Metal Building

On your Pencil line fasten 3 EZ clips to wall with the 3" wood screws. Make sure clips are level and not further that 48" apart

(For BRICK – predrill the hole with the hammer drill bit, then push the blue anchor into hole and use the 3" wood screw with the EZ Clip.)

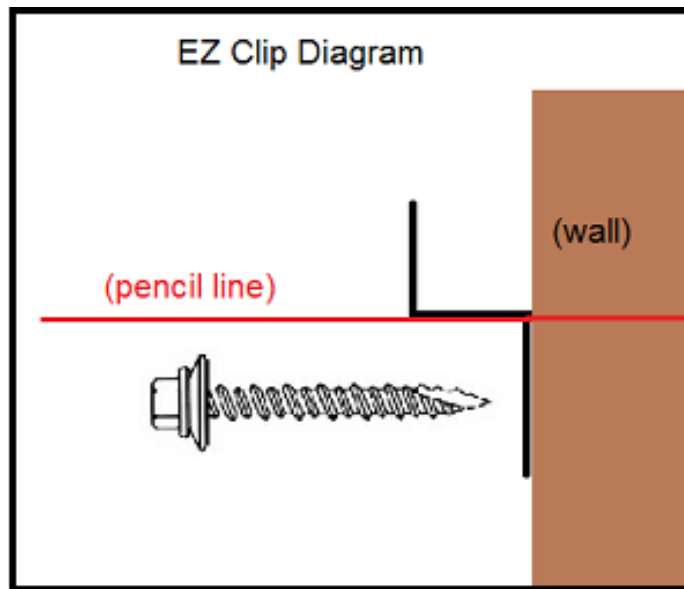

DO NOT TIGHTEN ALL THE WAY, SO THAT AWNING WILL DROP IN EASILY

STEP 3

Putting Up the Awning



We recommend 2 people for this part of install.

Hold the awning above the EZ Clips then lower the awning into the 3 EZ Clips. Move the awning left and right until you get it in the center of door or window. Once you have centered the awning, attach the awning to the EZ Clips with (2) Self tapping screws (#6 – What's in the box diagram). Repeat the step on all 3 EZ Clips

Next – Go back and tighten the 3" wood screws into the wall.

Step 4

Adding the Scrolls



Step 1 – Add the right scroll into place. The scrolls can attach anywhere on the crossbar. (Be sure to look for light fixture, door bell, or other obstructions that might be in the way.)

Step 2 – Attach the top of right scroll to the crossbar in the predrilled holes with (2) self-tapping screws. (#6 in Diagram – What’s in the box?)

Step 3– Attach the top of left scroll to the crossbar in the predrilled holes with (2) self-tapping screws. (#6 in Diagram – What’s in the box?)

Step 4 – Attach the bottom of scrolls to wall in the 2 predrilled holes using the 3” wood screws (#7 in Diagram – What’s in the box?)

Step 5

Sealing the Top of Awning



Using the clear silicon provided seal the top of the awning to the wall.

Thank you for purchasing our Cannon Canopy Awning. Please contact us if you have any questions, concerns or if we can help in anyway. 1-800-283-8053