
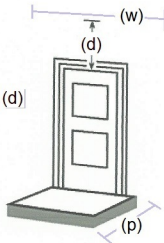


## Measuring Instructions for Doors and Windows

### The Cannon Canopy by DesignYourAwning.com

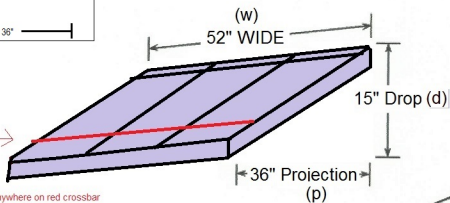

Attach Scrolls anywhere on red crossbar  
(Maximum width of scrolls are 45")

- Step 1: Measure the outside width of door and trim.  
(Note: The Cannon Canopy will cover 52" (w) of space above the door or window)
- Step 2: Measure from the top of door (d) to determine available space for mounting.  
(Note: There must be 15" of Drop(d) for an outward swing door)
- Step 3: Determine the scroll placement. Scrolls can be mounted anywhere on the crossbar.  
(Note: Inside width of scrolls are 45") Be sure to look for light fixtures, gutter downspouts, door bell, or other obstructions that might be in the way.
- Step 4: Select the metal canopy color that best compliments your home or office



### Pictures of the Cannon Canopy

